



We recommend that you quit
all programs before running
the BT 1800HG Installation CD



BT 1800HG Intelligent Gateway Quick Start Guide for PCs

READ ME FIRST
Do not plug anything
in until prompted

READ ME FIRST
Do not plug anything
in until prompted

 
BT 1800HG Intelligent Gateway Quick Start Guide for Apple Macintosh Computers



We recommend that you quit
all programs before running
the BT 1800HG Installation CD



The Welcome Kit

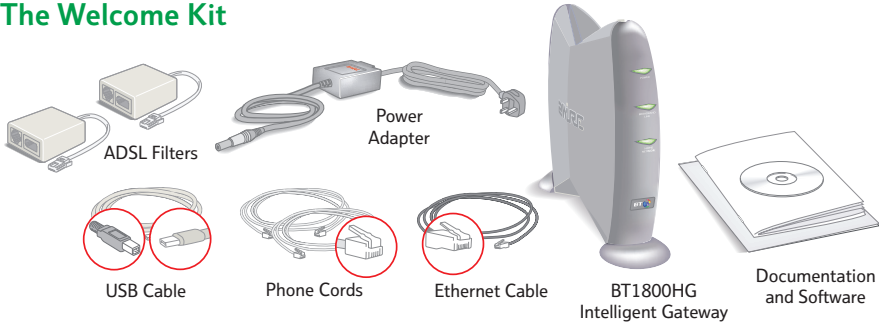

Welcome to the BT Intelligent Gateway. You will find everything you need to set up your Mac in this Quick Start Guide. Check and familiarise yourself with the contents of this welcome kit. If any items are missing or damaged, please call 0800 169 8639.

Auto setup

Recommended for customers connecting directly to the Intelligent Gateway.
Insert your BT 1800HG Installation CD and follow the on-screen instructions. To connect additional computers to your network, simply run the BT 1800HG Installation CD on each computer you wish to add. If you are using firewalls or anti-virus programs on these other computers, you may need to configure these. For full operating details of your gateway refer to the *Intelligent Gateway User's Guide* in the Documentation folder on the BT 1800HG Installation CD. You will need additional Ethernet cables, wireless cards, etc. to connect additional computers.

Step 1: Installing the Intelligent Gateway Software




Step 2: Establishing Your Broadband Connection

Refer to the Welcome Letter sent to you by email and post to enter the appropriate information into this screen. **It is very important that you use the information specified in your letter as it is customised for your installation.**

If you cannot locate this information please contact the 24 hour BT Business Technical Helpdesk on 0845 600 7020 (local rate number) or refer to the FAQ section of the *Intelligent Gateway User's Guide*.

The Welcome Kit

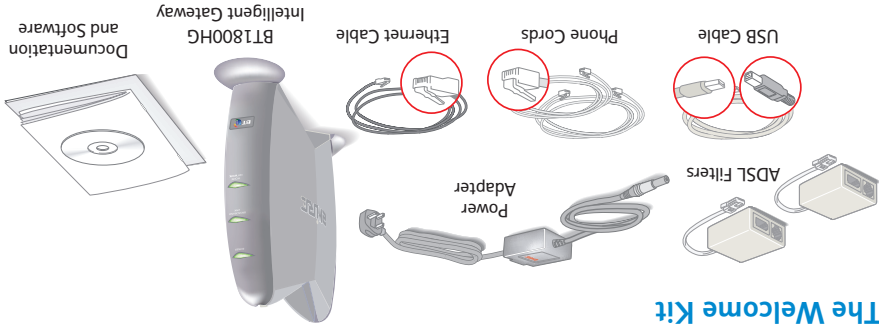

Welcome to the BT Intelligent Gateway. You will find everything you need to set up your PC in this Quick Start Guide. Check and familiarise yourself with the contents of this welcome kit. If any items are missing or damaged, please call 0800 169 8639.

Auto setup

Recommended for customers connecting directly to the Intelligent Gateway.
Insert your BT 1800HG Installation CD and follow the on-screen instructions. To connect additional computers to your network, simply run the BT 1800HG Installation CD on each computer you wish to add. If you are using firewalls or anti-virus programs on these other computers, you may need to configure these. For full operating details of your gateway, refer to the *Intelligent Gateway User's Guide* in the Documentation folder on the BT 1800HG Installation CD. You will need additional Ethernet cables, wireless cards, etc. to connect additional computers.

 
Step 1: Install the Intelligent Gateways Software



Step 2: Establishing Your Broadband Connection

Refer to the Welcome Letter sent to you by email and post to enter the appropriate information into this screen. **It is very important that you use the information specified in your letter as it is customised for your installation.**
If you cannot locate this information please contact the 24 hour BT Business Technical Helpdesk on 0845 600 7020 (local rate number) or refer to the FAQ section of the *Intelligent Gateway User's Guide*.

You will have been provided with 2 different usernames, a network login username and a primary username. When making your connection to the internet through the Intelligent Gateway use the Network Login username and password provided.

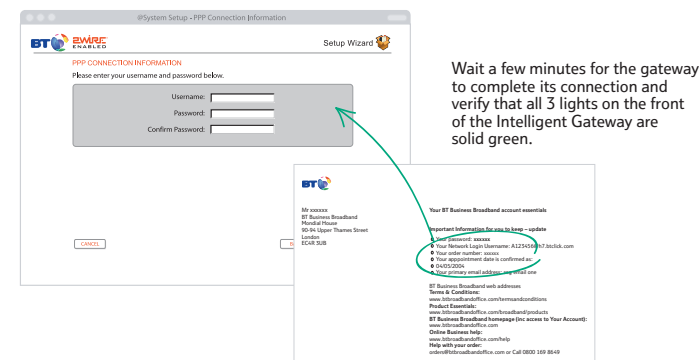

Manual setup

Recommended for customers connecting to an existing Local Area Network.

Install your ADSL filters on each telephone socket on which you intend to use a telephony device, e.g. telephone, fax machine, caller display unit, digital set-up box, analogue modem, etc. To purchase additional filters or accessories visit:


www.businessshop.bt.com/icat/modemsandmicrofilters

Open your browser and type 'home/setup' (no www. is required). Use **528Y-2374-A222-22BJ-B2QA** as your key code and follow the instructions on the web page to complete your installation. To connect additional computers to your network and get information on full installation and operating details, refer to the *Intelligent Gateway User's Guide* in the Documents folder on the BT 1800HG Installation CD.

Congratulations!

You have just completed the installation of your primary computer to the Intelligent Gateway and your computer is now connected to the internet. To surf the Web, simply open a web browser such as Internet Explorer or Netscape. To check or connect your email, open an email program such as Outlook Express.

For additional information on resolving connection problems, configuring email, and other questions you may have about your network, refer to the *Product Support Guide* provided with your Intelligent Gateway or call our 24 hour Technical Helpdesk on **0845 600 7020** (local rate number).

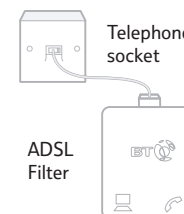

(local rate number).

For additional information on resolving connection problems, configuring email, and other questions you may have about your network, refer to the *Product Support Guide* provided with your Intelligent Gateway or call our 24 hour Technical Helpdesk on **0845 600 7020** (local rate number).

You have just completed the installation of your primary computer to the Intelligent Gateway and your computer is now connected to the internet. To surf the Web, simply open a web browser such as Internet Explorer or Netscape. To check or connect your email, open an email program such as Outlook Express.

Congratulations!

 
Open your browser and type 'home/setup' (no www. is required). Use **528Y-2374-A222-22BJ-B2QA** as your key code and follow the instructions on the web page to complete your installation. To connect additional computers to your network and get information on full installation and operating details, refer to the *Intelligent Gateway User's Guide* in the Documents folder on the BT 1800HG Installation CD.

www.businessshop.bt.com/icat/modemsandmicrofilters

or accessories visit:

Install your ADSL filters on each telephone socket on which you intend to use a telephony device, e.g. telephone, fax machine, caller display unit, digital set-up box, analogue modem, etc. To purchase additional filters

Recommended for customers connecting to an existing Local Area Network.

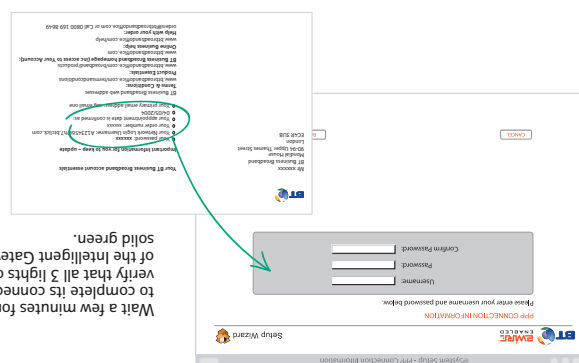


Wait a few minutes for the gateway to complete its connection and verify that all 3 lights on the front of the Intelligent Gateway are solid green.

You will have been provided with 2 different usernames, a network login username and a primary username. When making your connection to the internet through the Intelligent Gateway use the Network Login username and password provided.

Connection Method Reference


Ethernet

- With your computer switched off, connect the yellow Ethernet cable provided from your computer's Ethernet socket to any available LOCAL ETHERNET socket on the Intelligent Gateway. If you do not have an Ethernet socket on your computer, you will need to install an Ethernet adapter in to your Mac, following the manufacturer's instructions.
- Connect the AC power adapter provided from the Intelligent Gateway's POWER port to an electrical outlet.
- Switch-on your computer.

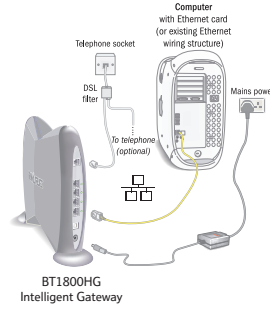

USB

- With your computer switched off, connect the blue USB cable provided from your computer's USB socket to the USB socket on the Intelligent Gateway.
- Connect the provided AC power adapter from the Intelligent Gateway's POWER port to an electrical outlet.
- Switch-on your computer.

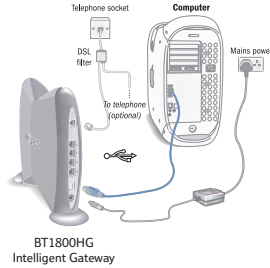

Installing USB Drivers on a Mac


Note: USB drivers are available for OS 8.6 to 9.X and OS 10.2 only. If a window opens asking if you 'would like to load the driver over the internet', click 'cancel'.

- Double-click on the '2Wire USB' folder on the CD. Double-click the '2Wire USB' icon inside the folder and click 'Continue'.
- Accept the License Agreement and click 'Accept' to continue your installation. Selecting 'Decline' will end your installation.
- Select 'Easy Install' and click 'Install'. When prompted, restart your computer.

Wireless


- Install your wireless adapter according to manufacturer's instructions.
- You must now configure the wireless adapter to communicate with your Intelligent Gateway. Refer to the 'Installing BT Business Broadband Wireless Adapters' section of the **Product Support Guide** for detailed configuration instructions.

The serial number and 64-bit WEP encryption key you will need for this configuration is located at the bottom of your gateway.

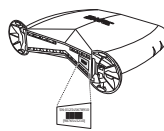


Connection Method Reference


- With your computer switched off, connect the yellow Ethernet cable provided from your computer's Ethernet socket to any available LOCAL ETHERNET socket on the Intelligent Gateway. If you do not have an Ethernet socket on your computer, you will need to install an Ethernet adapter in to your PC, following the manufacturer's instructions.
- Connect the AC power adapter provided from the Intelligent Gateway's POWER port to an electrical outlet.
- Switch on your computer.

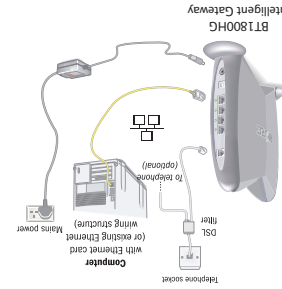

- With your computer switched off, connect the blue USB cable provided from your computer's USB socket to the USB socket on the Intelligent Gateway.
- Connect the provided AC power adapter from the Intelligent Gateway's POWER port to an electrical outlet.
- Switch on your computer.

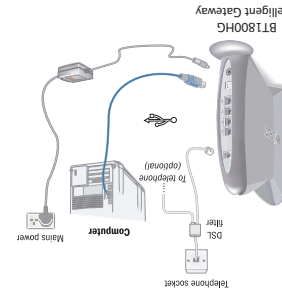

- If the 'Add Hardware Wizard displays', follow the on-screen instructions selecting the recommended default settings. If prompted to 'identify where to search for drivers, uncheck 'Floppy Disk drive' and check 'CD-ROM drive'.

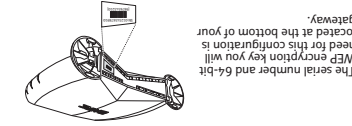

- Install your wireless adapter according to manufacturer's instructions.
- You must now configure the wireless adapter to communicate with your Intelligent Gateway. Refer to the 'Installing BT Business Broadband Wireless Adapters' section of the **Product Support Guide** for detailed configuration instructions.